

Hybrid PV Inverter with Energy Storage

User Manual



GOLLUM 5 k, 6 k, 7.6k, 8k

Content

Safety Introductions	3
Product Introduction	3
Product Overview	4
2.2 Features	5
2.3 Basic System Architecture	5
INSTALLATION	6
3.1 Parts List	6
3.2 Mounting instructions	6
3.3 Battery connection	8
3.3.2 Battery temperature connection	10
3.4 AC Input/Output Connection	10
3.5 PV Connection	11
3.5.1 PV Module Selection:	12
3.5.2 PV Module Wire Connection:	12
3.6 CT Connection	13
3.7 Earth Connection(mandatory)	14
3.8 WIFI Connection	14
3.9 Wiring System for Inverter	14
Single phase parallel connection diagram	16
3.11 Split phase parallel connection diagram	17
3.12 Three phase Parallel Inverter	18
4. OPERATION	19
4.1 Power ON/OFF	19
4.2 Operation and Display Panel	19
5. LCD Display Icons	19
5.1 Main Screen	19
5.1.1 LCD operation flow chart	20
5.2 Solar Power Curve	21
5.3 Curve Page-Solar & Load & Grid	22
5.4 System Setup Menu	22
5.5 Basic Setup Menu	23
5.6 Battery Setup Menu	23
5.7 System Work Mode Setup Menu	24
5.8 Grid Setup Menu	25
5.9 Generator Port Use Setup Menu	26
5.10 Advanced Function Setup Menu	26
5.11 Device Info Setup Menu	27
6. Mode	27
7. Fault information and processing	29
8. Limitation of Liability	31
Data Sheet:	32


Safety Introductions

- This chapter contains important safety and operating instructions. Read and keep this manual for future reference.
- Before using the inverter, please read the instructions and warning signs of the battery and corresponding sections in the instruction manual.
- Do not disassemble the inverter. If you need maintenance or repair, take it to a professional service center.
- Improper reassembly may result in electric shock or fire.
- To reduce risk of electric shock, disconnect all wires before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
- Caution: Only qualified personnel can install this device with battery.
- Never charge a frozen battery.
- For optimum operation of this inverter, please follow required specification to select appropriate cable size. It is very important to correctly operate this inverter.
- Be very cautious when working with metal tools on or around batteries. Dropping a tool may cause a spark or short circuit in batteries or other electrical parts, even cause an explosion.
- Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to "Installation" section of this manual for the details.
- Grounding instructions - this inverter should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
- Never cause AC output and DC input short circuited. Do not connect to the mains when DC input short circuits.

Product Introduction

This is a multifunctional inverter, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user configurable and easy accessible button operation such as battery charging, AC/solar charging, and acceptable input voltage based on different applications.

Product Overview

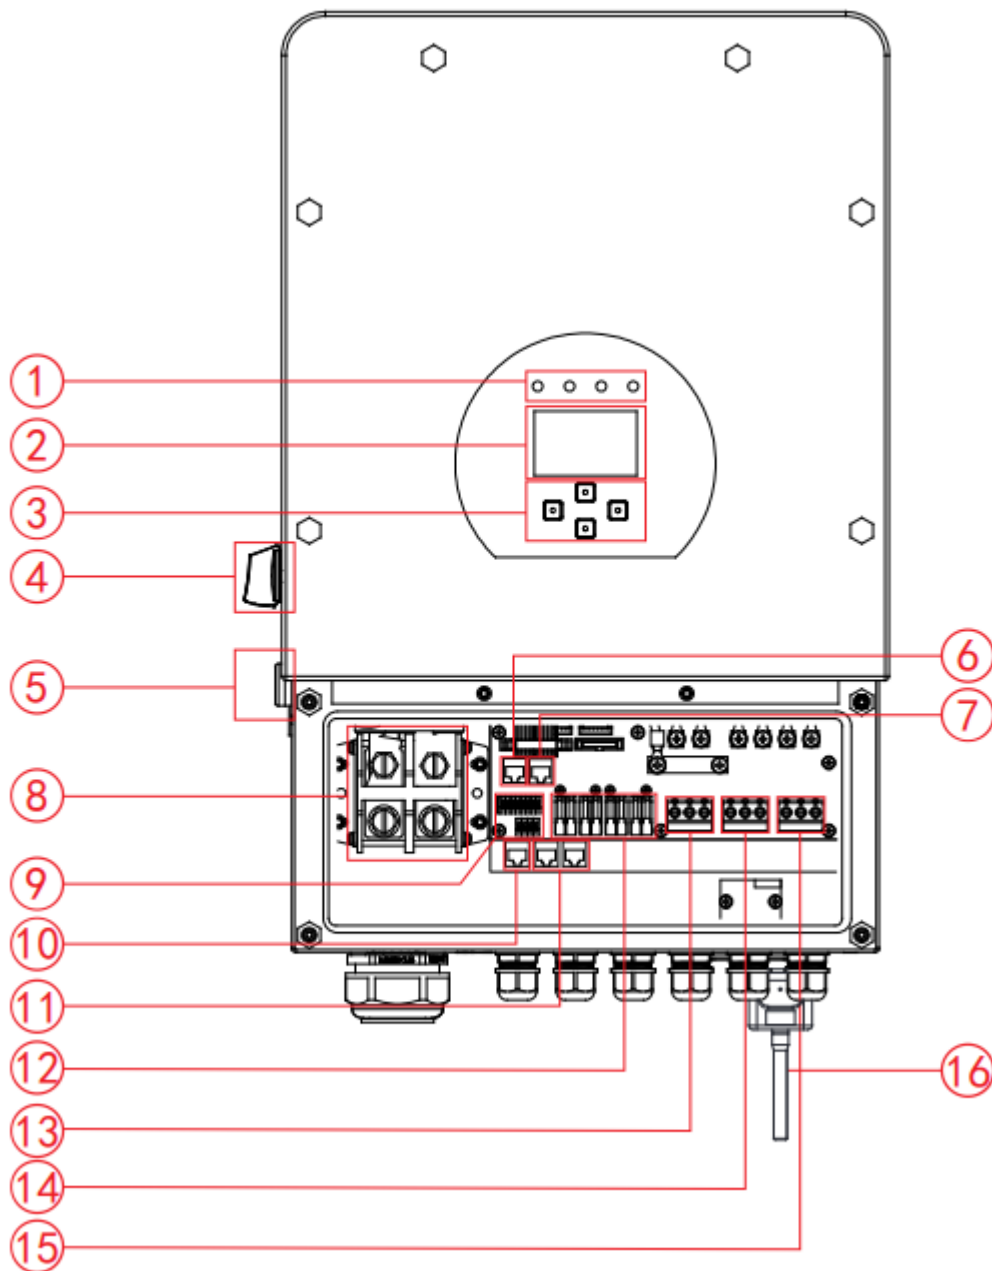

- | | | | |
|------------------------|-----------------------------|---------------------------|---------------------|
| 1: Inverter Indicators | 5: Power on/off button | 9: Function Port | 13: Grid |
| 2: LCD display | 6: RS 485 Port | 10: Parallel Box (master) | 14: Generator input |
| 3: Function Buttons | 7: CAN Port | 11: Parallel Port | 15: Load |
| 4: DC Switch | 8: Battery input connectors | 12: PV input, two MPPT | 16: Wifi Interface |

2.2 Features

- 220V Single phase, 120V/240V Split phase, Pure sine wave inverter.
- Self-consumption and feed-in to the grid.
- Auto restart while AC is recovering.
- Programmable supply priority for battery or grid.
- Programmable multiple operation modes: On grid, off grid and UPS.
- Configurable battery charging current/voltage based on applications by LCD setting.
- Configurable AC/Solar/Generator Charger priority by LCD setting.
- Compatible with mains voltage or generator power.
- Overload/over temperature/short circuit protection.
- Smart battery charger design for optimized battery performance
- With limit function, prevent excess power overflow to the grid.
- Supporting WIFI monitoring and build-in 2 strings of MPP trackers
- Smart settable three stages MPPT charging for optimized battery performance.
- Time of use function.
- Smart Load Function.

2.3 Basic System Architecture


The following illustration shows basic application of this inverter.

It also includes following devices to have a Complete running system.

- Generator or Utility
- PV modules

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or office environment, including motor type appliances such as refrigerator and air conditioner.

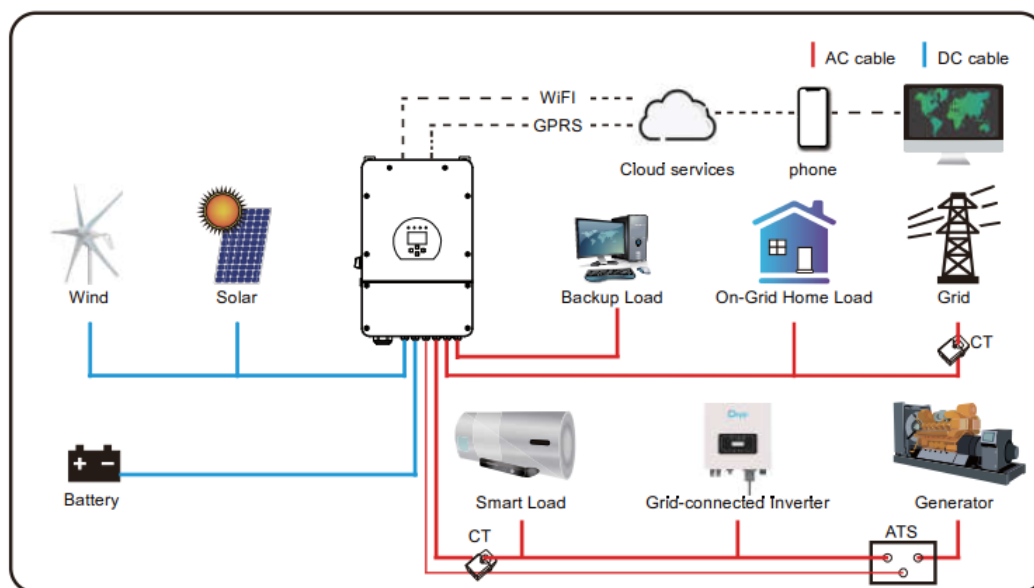

INSTALLATION

3.1 Parts List

Check the equipment before installation. Please make sure nothing is damaged in the package. You should have received the items in the following package:



No	Description	Qty
1	GOLLUM-5/6/7.6K/8K-SG01LP1-US/EU hybrid inverter	1
2	Stainless steel expansion bolts M8*80	4
3	User manual	1
4	WiFi plug	1
5	Current transformer (Optional) 2 (US)/1 (EU)	2
6	Battery sensor	1
7	L-type Hexagon wrench	1

Chart 3-1 Parts List

3.2 Mounting instructions


Installation Precaution

This Hybrid inverter is designed for outdoor use(IP65). Please make sure the installation site meets below conditions:

- Not in direct sunlight
- Not in areas where highly flammable materials are stored.
- Not in potential explosive areas.
- Not in the cool air directly.
- Not near the television Antenna or antenna cable.
- Not higher than altitude of about 2000 meters above sea level.
- Not in environment of precipitation or humidity (>95%)


Please AVOID direct sunlight, rain exposure, snow laying up during installation and operation.

Before connecting all wires, please take off the metal cover by removing screws as shown below:

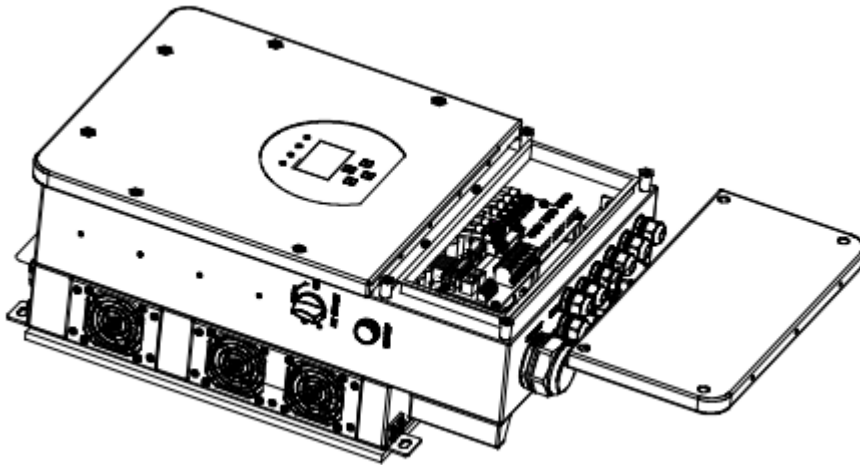

Considering the following points before selecting where to install:

- Please select a vertical wall with load-bearing capacity for installation, suitable for installation on concrete or other non-flammable surfaces, installation is shown below.
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The ambient temperature should be between $-25\sim 60^{\circ}\text{C}$ to ensure optimal operation
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and have enough space for removing wires.

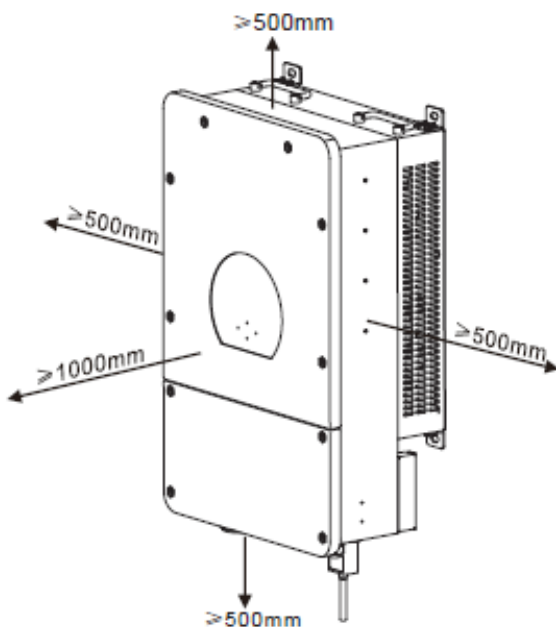


For proper air circulation to dissipate heat, allow a clearance of approx. 50cm to the side and approx. 50cm above and below the unit and 100cm to the front.

Mounting the inverter

Remember that this inverter is heavy! Please be careful when lifting out from the package. Choose the recommend drill head (as shown in below pic) to drill 4 holes on the wall, 52-60mm deep.

1. Use a proper hammer to fit the expansion bolt into the holes.
2. Carry the inverter and holding it, make sure the hanger aim at the expansion bolt, fix the inverter on the wall.
3. Fasten the screw head of the expansion bolt to finish the mounting.

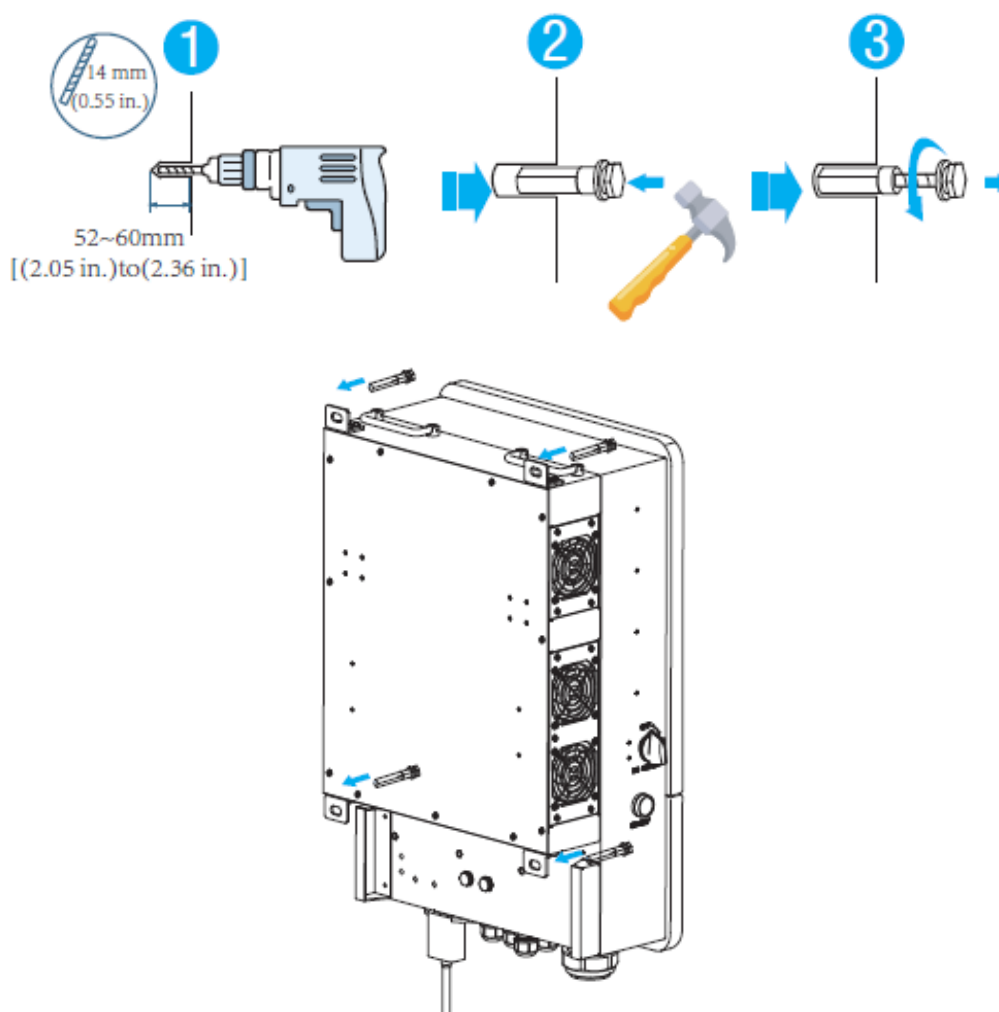

3.3 Battery connection

For safe operation and compliance, a separate DC over-current protector or disconnect device is required between the battery and the inverter. In some applications, switching devices may not be required but over-current protectors are still required. Refer to the typical amperage in the table below for the required fuse or circuit breaker size

Recommended battery cable size:

Model	Wire Size	Cable(mm2)	Torque value (max)
5/6/7.6/8KW	2AWG	35	24.5 Nm

Chart 3-2 Cable size




All wiring must be performed by a professional person.



Connecting the battery with a suitable cable is important for safe and efficient operation of the system. To reduce the risk of injury, refer to Chart 3-2 for recommended cables.

Please follow below steps to implement battery connection:

1. Please choose a suitable battery cable with correct connector which can well fit into the battery terminals.
2. Use a suitable screwdriver to unscrew the bolts and fit the battery connectors in, then fasten the bolt by the screwdriver, make sure the bolts are tightened with torque of 2. Nm in clockwise direction, make sure polarity at both the battery and inverter is correctly connected.

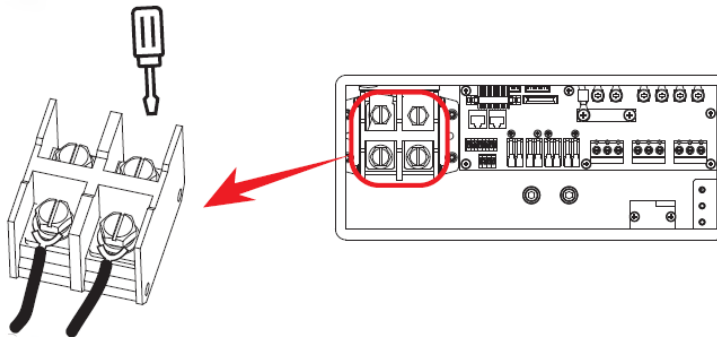

3. In case of children touch or insects go into the inverter. Please make sure the inverter connector is fasten to waterproof position by twist it clockwise.




Installation must be performed with care.



Before making the final DC connection or closing DC breaker/disconnect, be sure positive (+) must be connect to positive (+) and negative (-) must be connected to negative (-). Reverse polarity connection on battery will damage the inverter.

3.3.2 Battery temperature connection

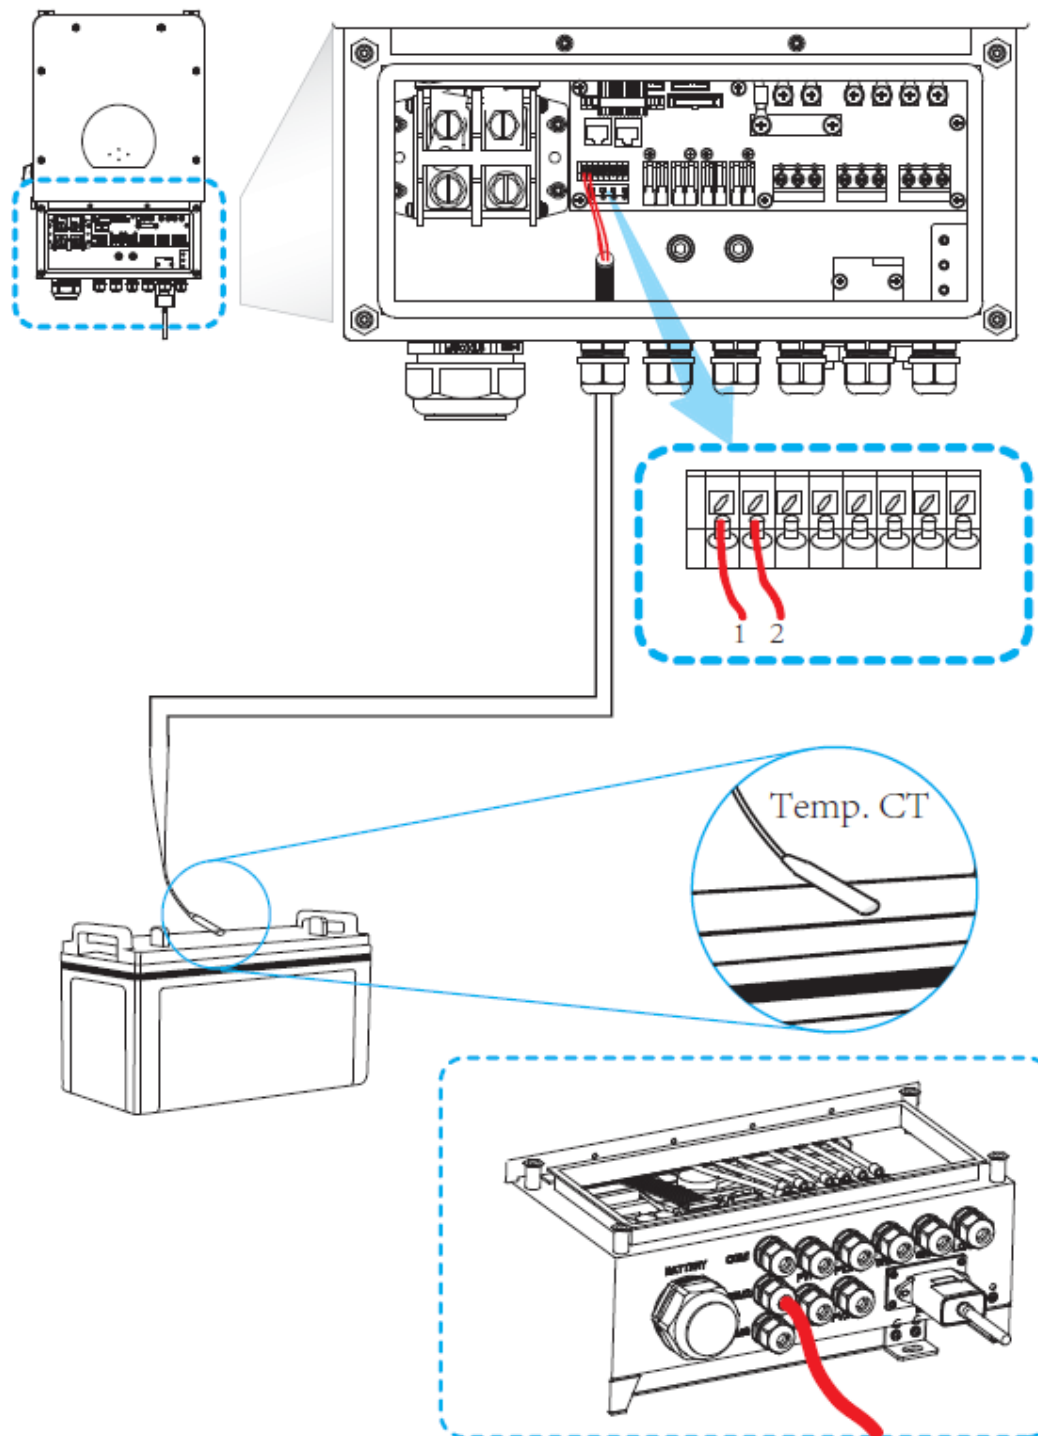

3.4 AC Input/Output Connection

Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended of AC breaker is 50A for 5kw and 80A for 8KW.

There are three terminal blocks with “Grid” “Load” and “GEN” markings. **Please do not misconnect input and output connectors.**




All wiring must be performed by a qualified personnel. It is very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable as below.

Model	Gauge	Cable (mm ²)	Torque value
5/6 kW	8AWG	8	1.2 Nm
7.6 / 8 kW	6AWG	13	1.2 Nm

Chart 3-3 Recommended Size for AC wires

Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnecter first.
2. Remove insulation sleeve 10mm length, unscrew the bolts, insert the AC input wires according to polarities indicated on the terminal block and tighten the terminal screws. Make sure the connection is complete.

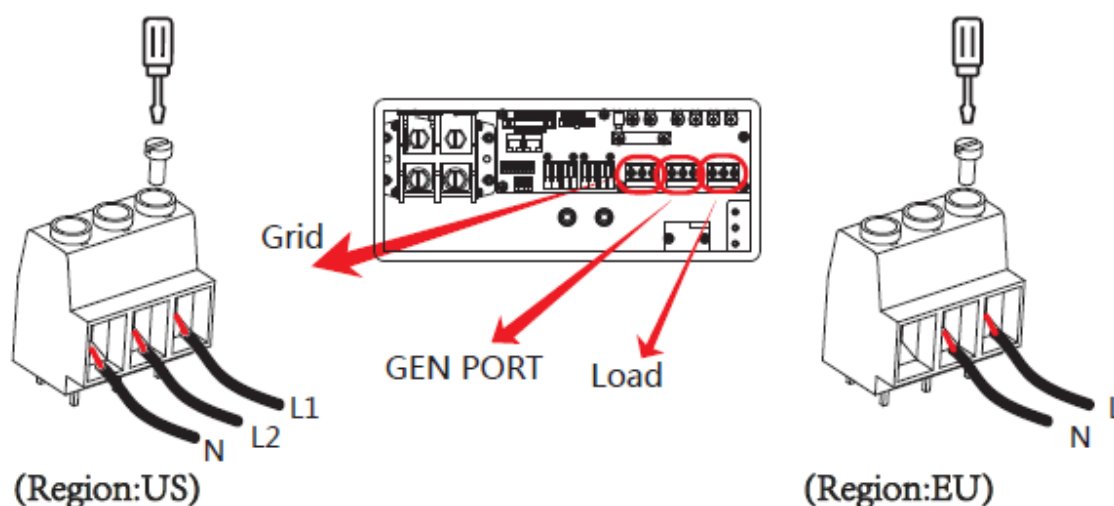

Be sure that AC power source is disconnected before attempting to wire it to the unit.

3. Then, insert AC output wires according to polarities indicated on the terminal block and tighten terminal. Be sure to connect corresponding N wires and PE wires to related terminals as well.
4. Make sure the wires are securely connected.
5. Appliances such as air conditioner are required at least 2-3 minutes to restart because it is required to have enough time to balance refrigerant gas inside of circuit. If a power shortage occurs and recovers in short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it is equipped with time-delay function before installation. Otherwise, this inverter will trigger overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

3.5 PV Connection

Before connecting to PV modules, please install a separately DC circuit breaker between inverter and PV modules. It is very important for system safety and efficient operation to use appropriate cable for

PV module connection. to reduce risk of injury, please use the proper recommended cable size as below.

Model	Wire Size	Cable (mm ²)	Torque value (max)
5/6/7.6/8 kW	1x12AWG	4	1.2 Nm

Chart 3-2 Cable size



To avoid any malfunction, do not connect any PV modules with possible current leakage to the inverter. For example, grounded PV modules will cause current leakage to the inverter. When using PV modules, please be sure NO grounding.



It is requested to use PV junction box with surge protection. Otherwise, it will cause damage on inverter when lightning occurs on PV modules.

3.5.1 PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

- 1) Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
- 2) Open circuit Voltage (Voc) of PV modules should be higher than min. start voltage.


Inverter Model	6 kW	7.6 kW	8 kW
PV Input Voltage	370 V (100V~500V)		
Max. PV Array Open Circuit Voltage	500 VDC		
PV Array MPPT Voltage Range	125V DC – 425 V DC		
No. of MPP Tracker	2		
No. of Strings per MPP Tracker	2+1	2+2	2+2

Chart 3-5

3.5.2 PV Module Wire Connection:


Please follow below steps to implement PV module connection:

1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool.
3. Check correct polarity of wire connection from PV modules and PV input connectors. Then, connect positive pole (+) of connection wire to positive pole (+) of PV input connector. Connect negative pole (-) of connection wire to negative pole (-) of PV input connector. Close the switch and make sure the wires are tightly fixed.

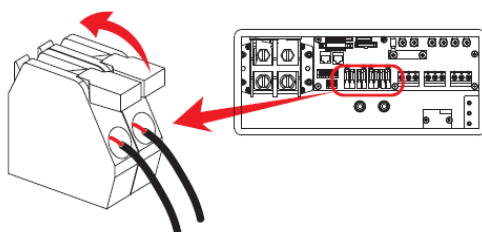


3.6 CT Connection

Region: EU

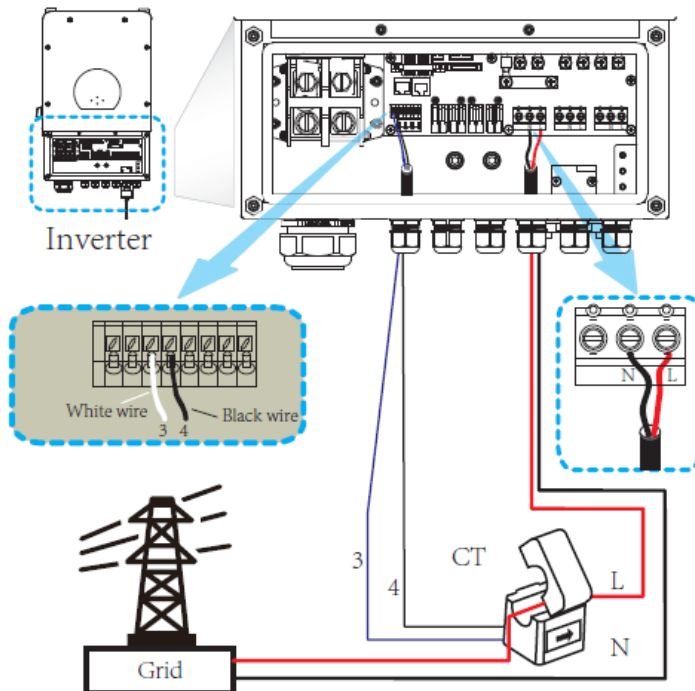

Region: US

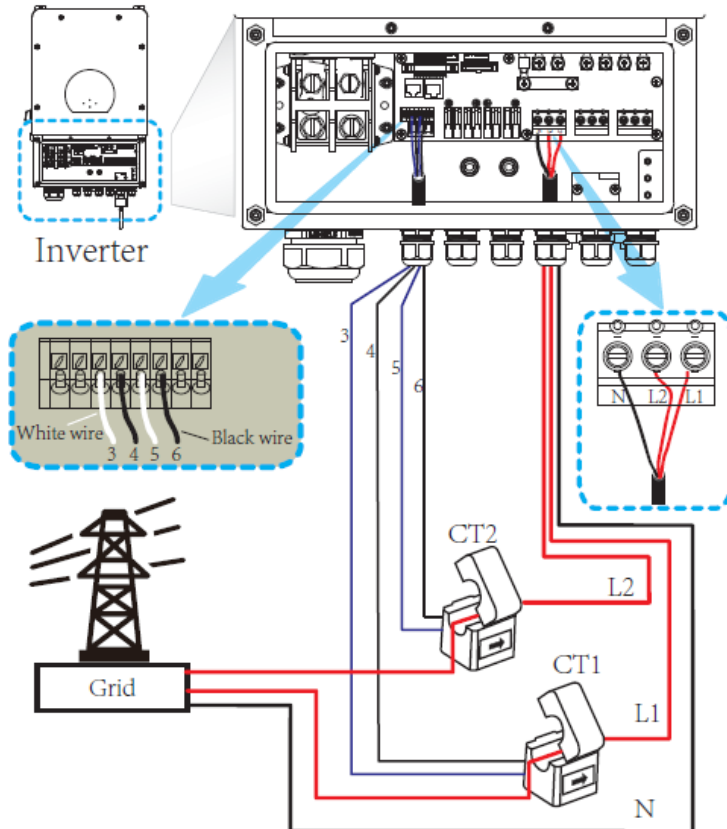


Note:

When the inverter is in the off-grid state, the N line needs to be connected to the earth.

3.7 Earth Connection(mandatory)


Ground cable shall be connected to ground plate on grid side this prevents electric shock. If the original protective conductor fails.

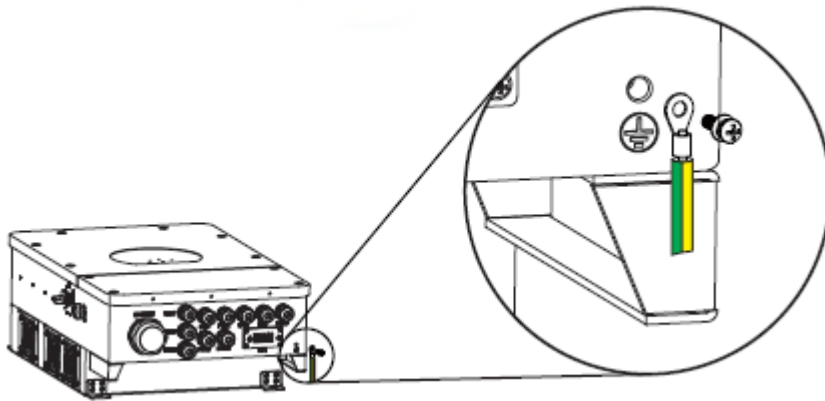

3.8 WIFI Connection


For the configuration of Wi-Fi Plug, please refer to illustrations of the Wi-Fi Plug.

3.9 Wiring System for Inverter

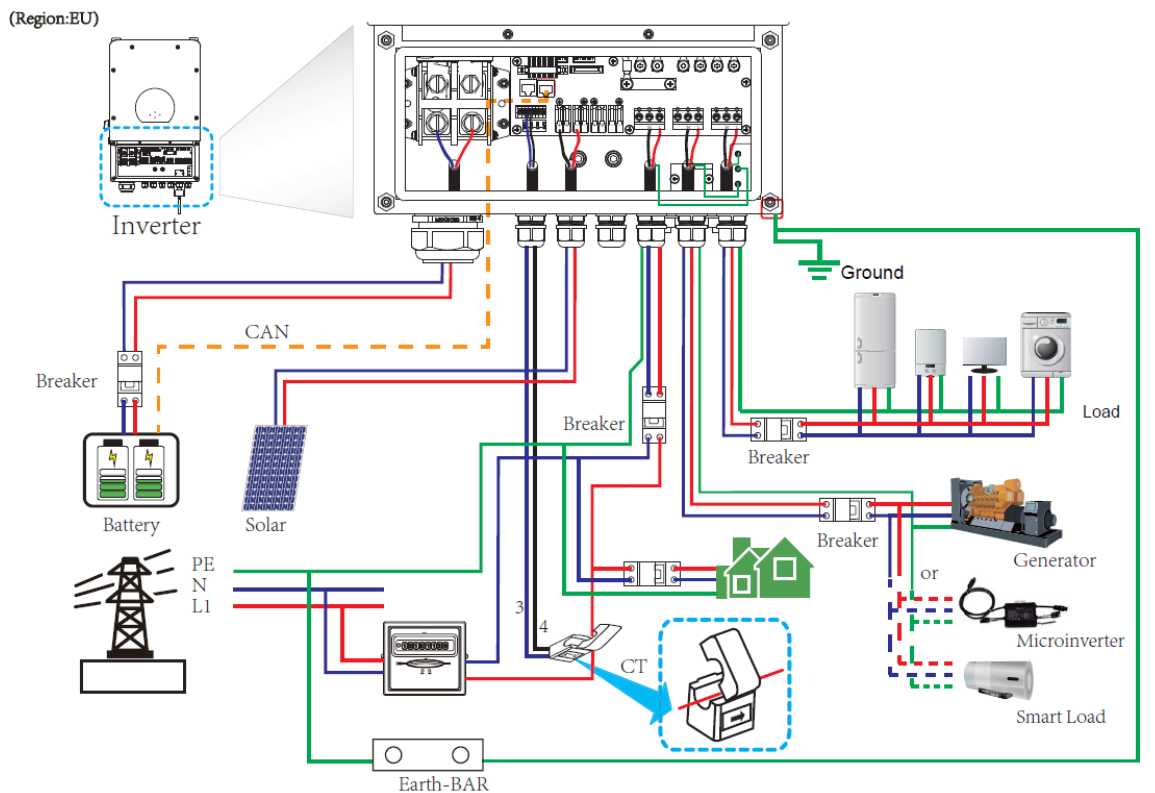


USER MANUAL

(Region:US)

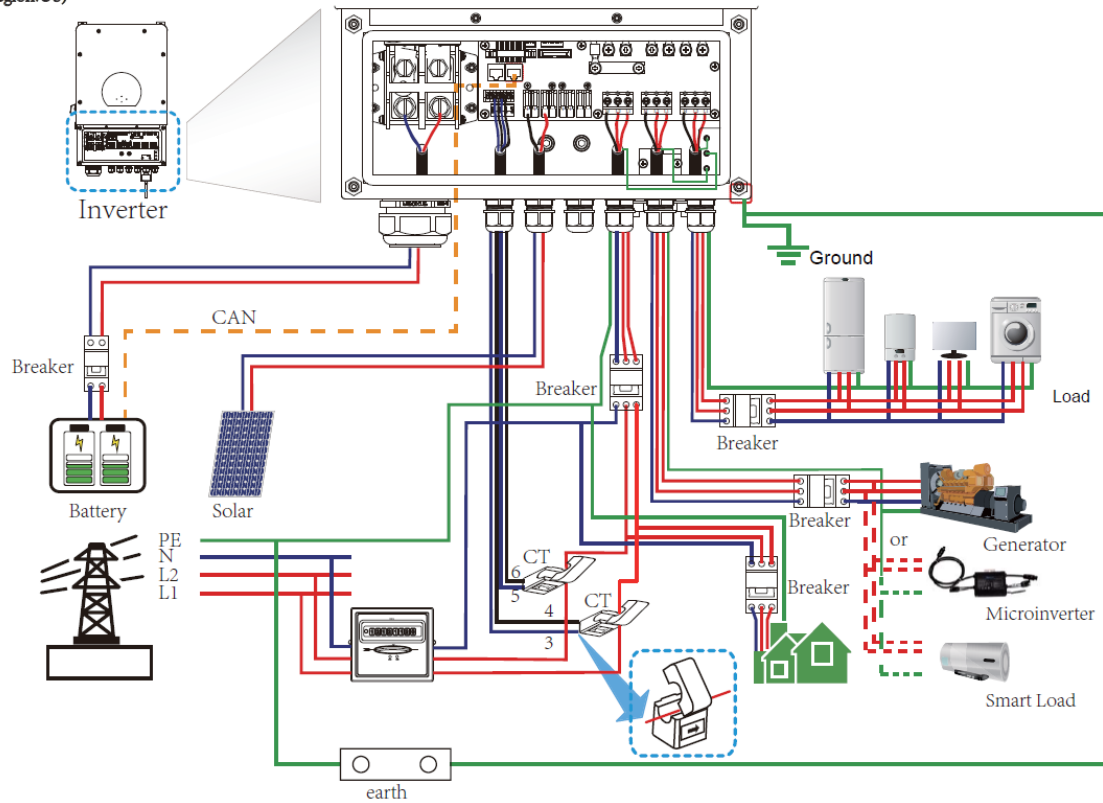


Single phase parallel connection diagram

EU Region

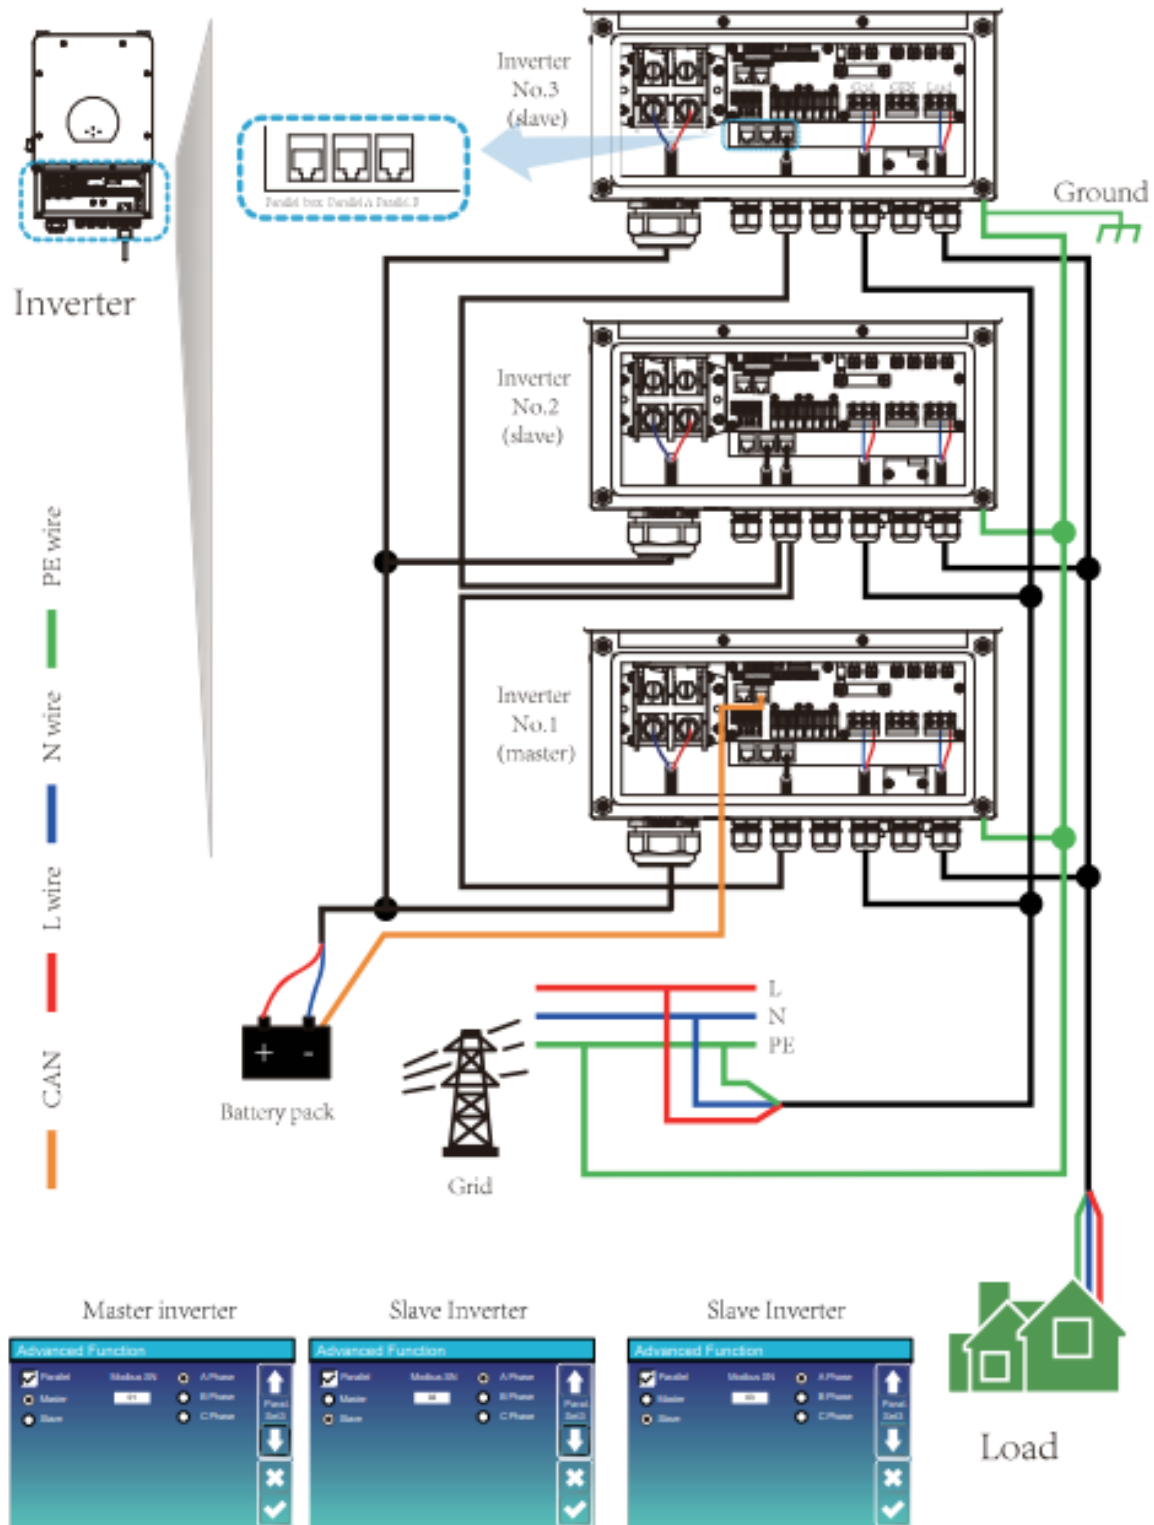


3.11 Split phase parallel connection diagram

US Region

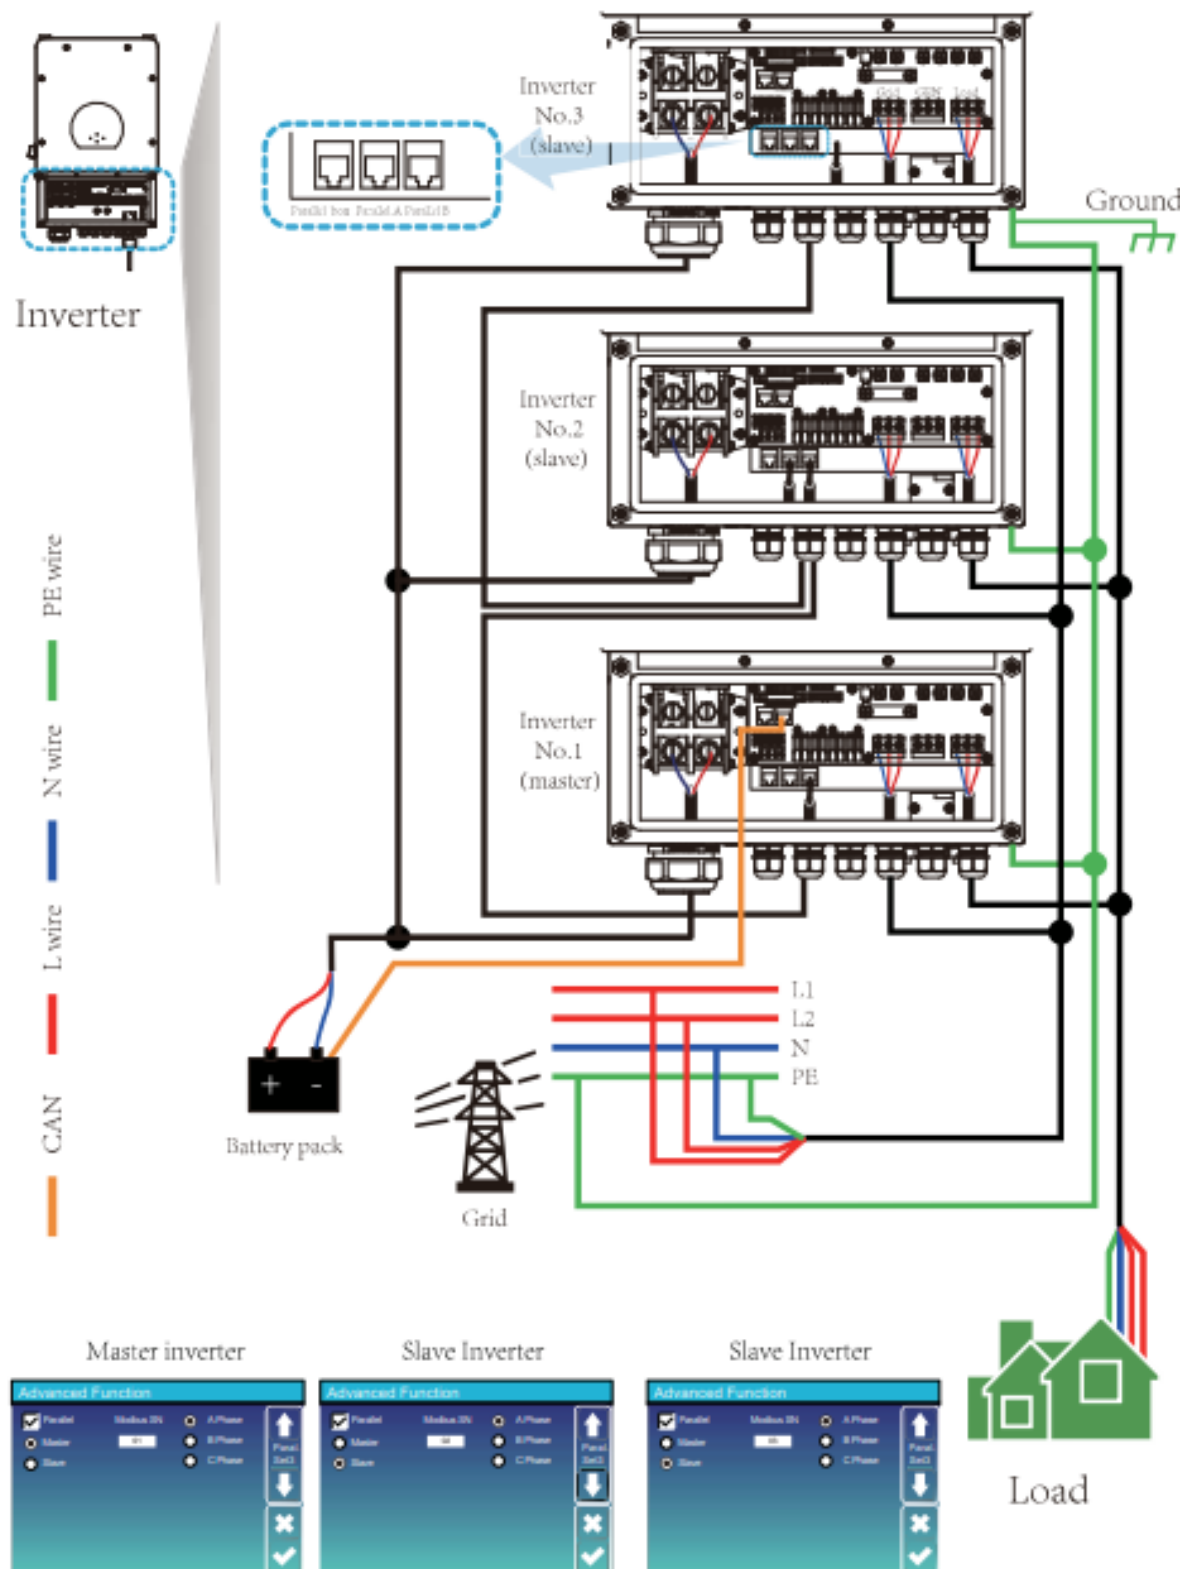

3.12 Three phase Parallel Inverter

Only for EU/230 V AC

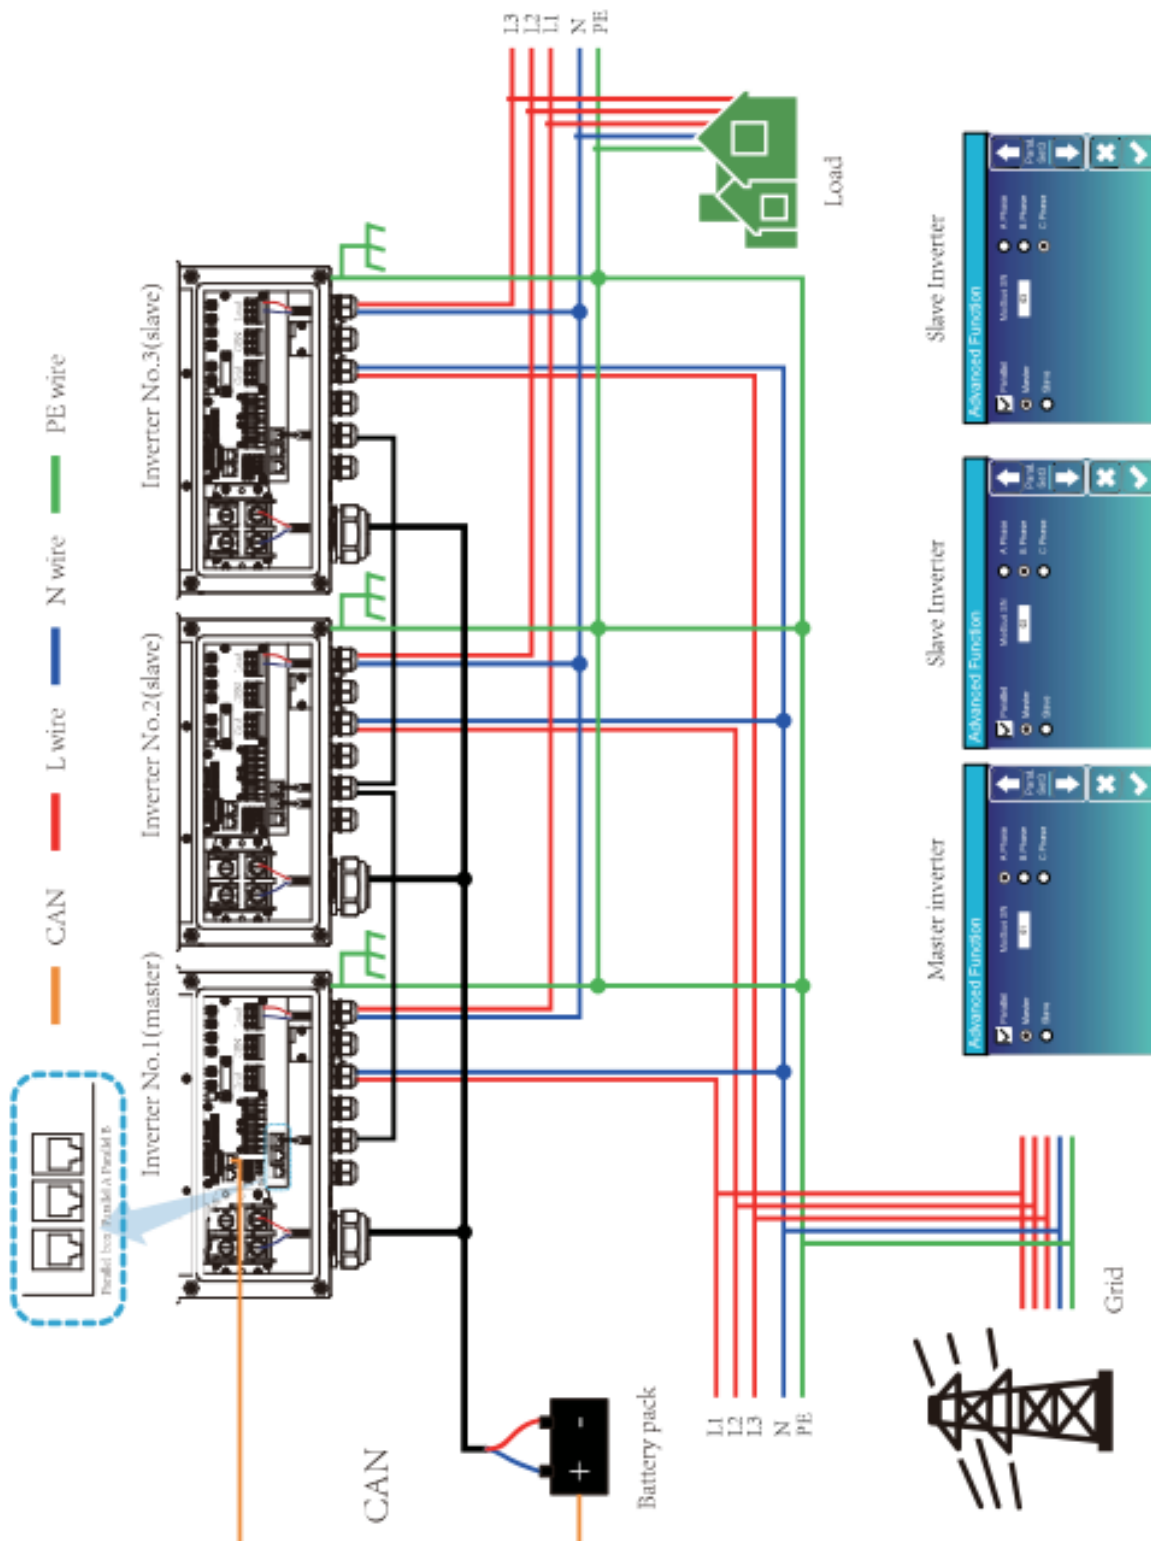

4. OPERATION

4.1 Power ON/OFF

Once the unit has been properly installed and the batteries are connected well, simply press On/Off button (located on the left side of the case) to turn on the unit. When system without battery connected, but connect with either PV or grid, and ON/OFF button is switched off, LCD will still light up (Display will show OFF), In this condition, when switch on ON/OFF button and select NO battery, system can still working.

4.2 Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes four indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

LED Indicator		Messages
DC	Green LED solid light	PV connection normal
AC	Green LED solid light	Grid connection normal
Normal	Green LED solid light	Inverter operating normal
Alarm	Red LED solid light	Malfunction or warning

Chart 4-1 LED indicators


Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
Down	To go to next selection
Enter	To confirm the selection

Chart 4-2 Function Buttons

5. LCD Display Icons

5.1 Main Screen

The LCD is touchscreen, below screen shows the overall information of the inverter.

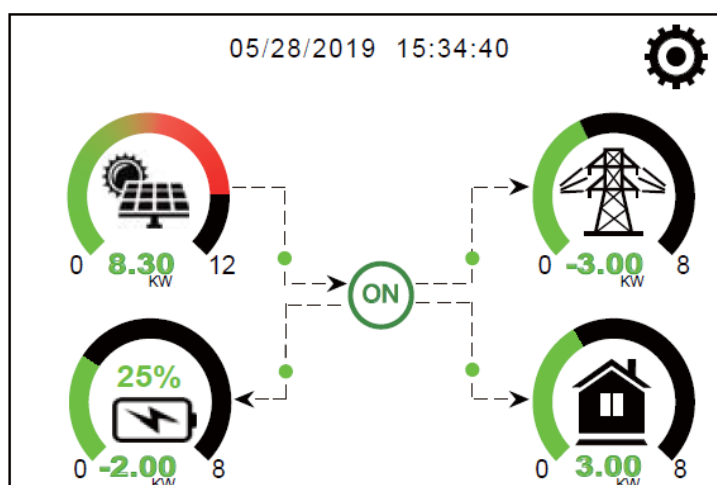


1. The icon in the center of the home screen indicates that the system is Normal operation. If it turns into "comm./ F01~F64", it means the inverter has communication errors or other errors, the error message will display under this icon (F01-F64 errors, detail error info can be viewed in the System Alarms menu).
2. At the top of the screen is the time.
3. System Setup Icon, Press this set button, you can enter into the system setup screen which including Basic Setup, Battery Setup, Grid Setup, System Work Mode, Generator port use, Advanced function and Li-Batt info.
4. The main screen showing the info including Solar, Grid, Load and Battery. It's also displaying the energy flow direction by arrow. When the power is approximate to high level, the color on the panels will change from green to red so system info showing vividly on the main screen.

PV power and Load power always keep positive.

Grid power negative means sell to grid, positive means get from grid.



Battery power negative means charge, positive means discharge.

5.1.1 LCD operation flow chart

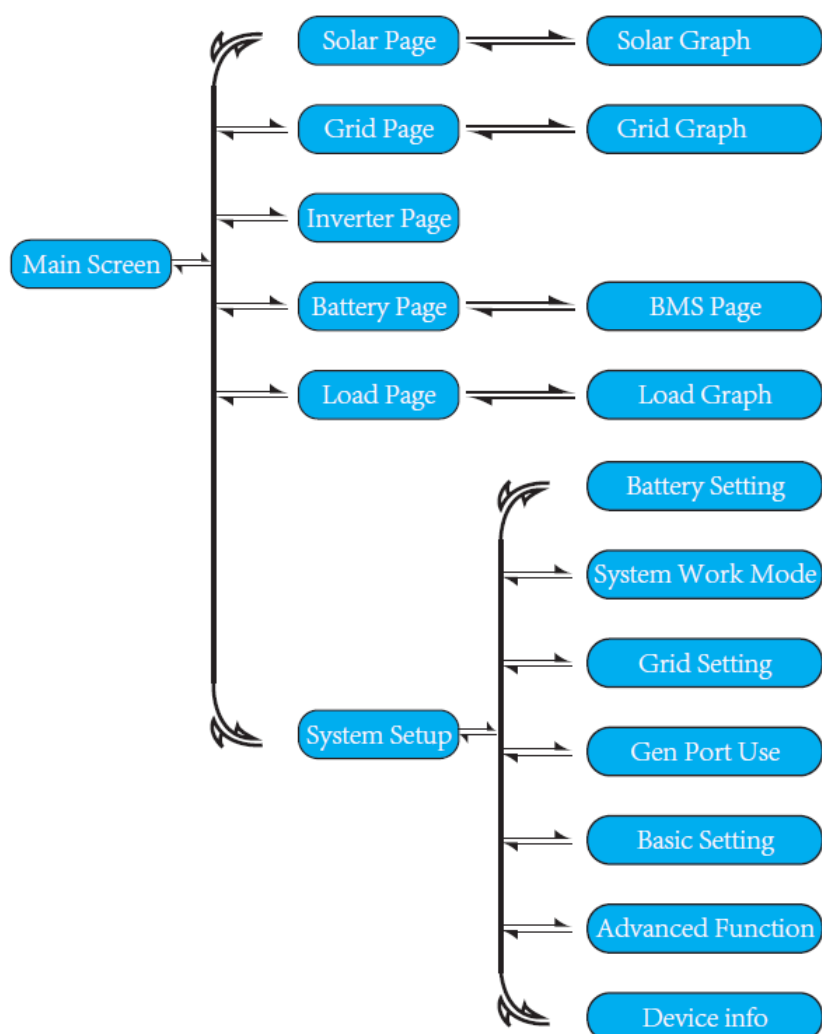


5.2 Solar Power Curve





<div>Solar</div> <div> <div>Power: 1560W</div> <div> PV1-V: 286V PV2-V: 45V PV1-I: 5.5A PV2-I: 0.0A P1: 1559W P2: 1W </div> </div> <div> <div>Today=8.0 KWH</div> <div>Total =12.00 KWH</div> </div> <div>Energy</div>	<p>This is Solar Panel detail page.</p> <ol style="list-style-type: none"> ① Solar Panel Generation. ② Voltage,Current,Power for each MPPT. ③ Solar Panel energy for Day and Total. <p>Press the “Energy “button will enter into the power curve page.</p>
<div>Inverter</div> <div> <div>Power: 44W</div> <div> L1: 240V L2: 0V I1:0.6A I2:0.0A Power1: 0W Power2: 0W </div> </div> <div> <div>DC-T:52.6C</div> <div>AC-T:41.0C</div> </div>	<p>This is Inverter detail page.</p> <ol style="list-style-type: none"> ① Inverter Generation. ② Voltage,Current,Power for each Phase. ③ DC-T:mean DC-DC temperature, AC-T:mean Heat-sink temperature.
<div>Load</div> <div> <div>Power: 42W</div> <div> L1: 240V L2: 0V P1: 0W P2: 0W </div> </div> <div> <div>Today=0.0 KWH</div> <div>Total =0.80 KWH</div> </div> <div>Forced</div> <div>Energy</div>	<p>This is Back-up Load detail page.</p> <ol style="list-style-type: none"> ① Back-up Power. ② Voltage,Power for each Phase. ③ Back-up consumption for Day and Total. <p>Press the “Energy “button will enter into the power curve page.</p> <p>Press the “Forced “button will forced open the smart-load(While GEN PORT utilized as Smart-load output).</p>
<div>Grid</div> <div> <div>Stand-by</div> <div>Power: 0W</div> <div>0.0Hz</div> <div> L1: 0V L2: 0V CT1: 0W CT2: 0W LD1: 0W LD2: 0W </div> </div> <div> <div>BUY</div> <div>Today=2.2KWH</div> <div>Total =11.60 KWH</div> <div>SELL</div> <div>Today=0.0KWH</div> <div>Total =8.60 KWH</div> </div> <div>Energy</div>	<p>This is Grid detail page.</p> <ol style="list-style-type: none"> ① Status,Power,Frequency. ② L1&L2:Voltage for each Phase CT1&CT2:External Current Sensor Power LD1&LD2:Internal Current Sensor Power. ③ BUY:Energy from Grid to Inverter, SELL:Energy from Inverter to Load. <p>Press the “Energy “button will enter into the power curve page.</p>

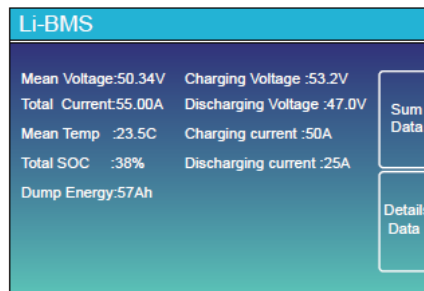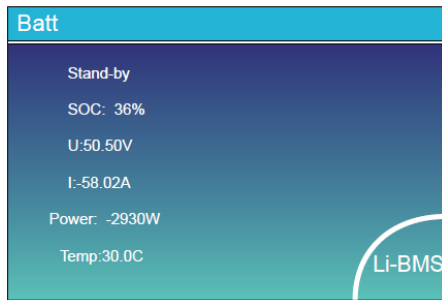

This is Battery detail page. If you use Lithium Battery, you can enter BMS page

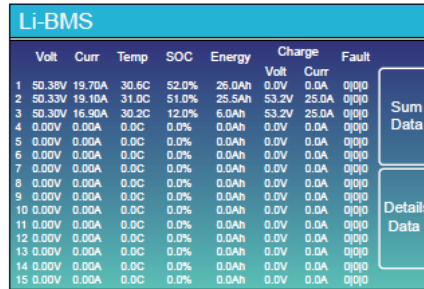


5.3 Curve Page-Solar & Load & Grid

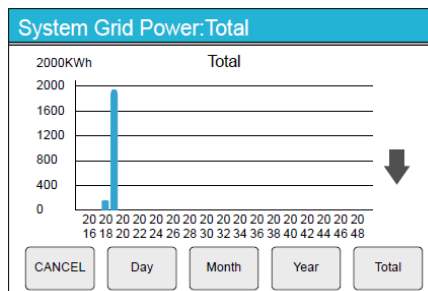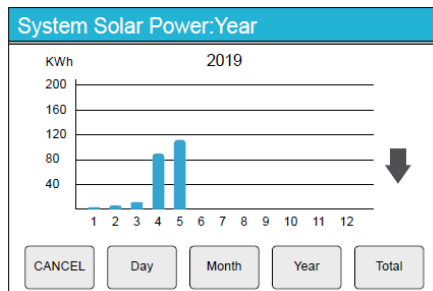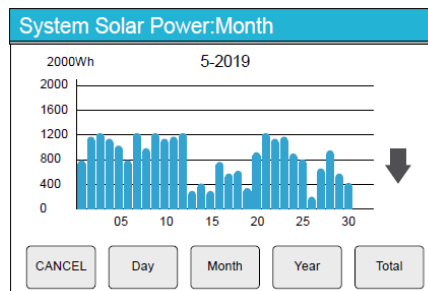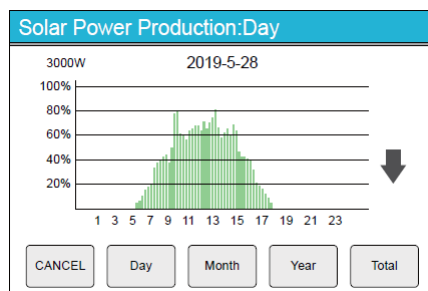

Solar power curve for daily, monthly, yearly and total can be roughly checked on the LCD. For more accuracy power generation, please check on the monitoring system. Click the up and down arrow to check power curve of different period.

5.4 System Setup Menu

5.4 System Setup Menu

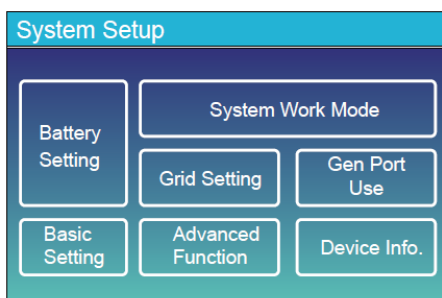

This is System Setup page.

5.5 Basic Setup Menu

Basic Setting

☒ Time Syncs ☒ Beep ☒ Auto Dim
 Year: 2019 Month: 03 Day: 17
 Hour: 09 Minute: 15
☒ 24-Hour
☐ Factory Reset ☐ Lock out all changes

Basic Set

This is Basic Setup page.

5.6 Battery Setup Menu

Battery Setting

Batt Mode

☒ Lithium Batt Capacity: 400Ah
☐ Use Batt V Max A Charge: 40A
☐ Use Batt % Max A Discharge: 40A
☐ No Batt ☐ Activate Battery

Batt Mode

Lithium Battery

Batt Mode----- Lithium
 Max A charge----- 0-185A
 Max A Discharge-----0-185A
 Activate Battery-----Enable

AGM Battery

Batt Mode----- Use Batt V or Use Batt V %
 Batt Capacity----- 50-2000Ah
 Max A charge----- 0-185A
 Max A Discharge-----0-185A
 Activate Battery -----Enable

No Batt --- No need to set other parameters, keep the default value.

Battery Setting

Start: 30% A: 40A
☐ Gen Charge ☐ Grid Charge
☐ Gen Signal ☐ Grid Signal
 Gen Max Run Time: 0.0 hours
 Gen Down Time: 0.5 hours

Batt Set2

This is Battery Setup page. ① ③

Start =30%---It indicates that the Generator will start when the Battery capacity is less than 30% in the condition of Off-grid mode.

A = 40A---It indicates the Current that the Generator charges the Battery after started.

Gen Charge---The Switch that the Generator charges the Battery.

Gen Signal ---It indicates whether the Generator's ATS signal is on.

Max RunTime(x.xhous)Indicates that the generator is the longest in a day,The time x.xhours can be run, and the generator will be turned off when the time is up. 24.0hours (default) means that It keeps running without shutting down.

DownTime(x.xhours)It indicates the delay of the Generator to shut down after it has reached the run time.

This is Grid Charge, you need select. ②

Start =30%---no use, for customization.

A = 40A--- It indicates the Current that the Grid charges the Battery.

Grid Charge---The Switch that the Generator charges the Battery.

Grid Signal ---Disable.

Battery Setting

Lithium Mode: 00
 Shutdown: 10%
 Low Batt: 30%
 Restart: 80%

Batt Set3

Lithium Mode--This is BMS protocol.default is 0 please reference the document (Approved Battery-Deye) .

Shutdown 10%--the inverter will shutdown if the SOC is below this.

Low Batt 20% --the inverter will shutdown if the SOC is below this.

Restart 40% --Restart level when inverter shutdown.

Battery Setting

Float V ①	55.2V	Shutdown	41.0V
Absorption V	57.6V	Low Batt ③	45.0V
Equalization V	58.8V	Restart	52.0V
Equalization Days	90 days	TEMPCO(mV/C/Cell)	-5
Equalization Hours	2.0 hours	Batt Resistance	25mOhms

Batt Set3
X
✓

This is Battery 4 tages charge voltage. ①

This is for professional installers,you can hold default if you do not know. ②

Shutdown 10%--the inverter will shutdown if the SOC is below this.

Low Batt 20% --the inverter will alarm if the SOC is below this. ③

Restart 40% --Restart level when inverter shutdown.

5.7 System Work Mode Setup Menu

System Work Mode

Work Mode

☒ Selling First

☐ Zero Export To Load ☐ Solar Sell

☐ Zero Export To CT ☐ Solar Sell

Max Sell Power 4000

Energy pattern ☒ BattFirst ☐ LoadFirst

Work Mode1
X
✓

Work Mode

Selling First : It means that the excess energy has priority in grid connection.

Zero Export To Load : It means output power according to it consumed by the load.

Zero Export To CT : It means output power according to the CT position.

Solar Sell : It means that the excess solar energy can be integrated into the grid.

Max Sell Power 0-8000W

Energy Pattern

BattFirst--- It means solar power will charge battery first, when battery is full then feed-out power to the Load or Grid.

LoadFirst-- The solar energy will be used to supply the local load first,then to charge the battery.The redundant power will export to the public grid.

System Work Mode

Grid Charge Gen Time Of Use

Grid Charge	Gen	Time	Batt
<input type="checkbox"/>	<input type="checkbox"/>	01:00 ~ 5:00	80%
<input type="checkbox"/>	<input type="checkbox"/>	05:00 ~ 9:00	80%
<input type="checkbox"/>	<input type="checkbox"/>	09:00 ~ 13:00	80%
<input type="checkbox"/>	<input type="checkbox"/>	13:00 ~ 17:00	80%
<input type="checkbox"/>	<input type="checkbox"/>	17:00 ~ 21:00	80%
<input type="checkbox"/>	<input type="checkbox"/>	21:00 ~ 01:00	80%

Work Mode2
X
✓

Time of use

① Switch for Grid charging the battery.

② Switch for Den charging the battery.

③ There are six time period can be set, each period must from small to large.

5.8 Grid Setup Menu

Grid Setting

Grid Mode

- ☐ General Standard
- ☒ UL1741 & IEEE1547
- ☐ CPUC RULE21
- ☐ SRD-UL-1741

Grid Type

- ☐ 220V Single Phase
- ☒ 120/240V Split Phase
- ☐ 120/208V 3 Phase
- ☐ 120V Single Phase

Grid Set1
Grid Set2
Grid Set3
Grid Set4

Please select the correct Grid Mode in your local area. If you are not sure, please choose General Standard.

Please select the correct Grid Type in your local area, otherwise the machine will not work or be damaged.

Grid Setting

Grid Frequency

- ☐ 50HZ
- ☒ 60HZ

Reconnection Time 60S PF 1.000

Grid HZ High 60.5Hz Grid Vol High 265.0V

Grid HZ Low 59.3Hz Grid Vol Low 185.0V

Grid Set2
Grid Set3
Grid Set4

UL1741&IEEE1547, CPUC RULE21, SRD-UL-1741

No need to set the function of this interface.

General Standard

Please select the correct Grid Frequency in your local area. You can hold this in default value.

Grid Setting

☐ Q(V) ☐ FW ☐ VW

V1:0.0V Q1:0.00 Fstart:0.00Hz Vstart:0.0V

V2:0.0V Q2:0.00 Fstop:0.00Hz Vstop:0.0V

V3:0.0V Q3:0.00 Normal Ramp rate 0.0%/s

V4:0.0V Q4:0.00 Soft Start Ramp rate 0.0%/s

Grid Set3
Grid Set4

For California only.

Grid Setting

☐ L/HVRT ☐ L/HFRT

HV2:0.0V 0.16S

HV1:0.0V 0.16S HF2:0.00HZ 0.16S

LV1:0.0V 0.16S HF1:0.00HZ 0.16S


LV2:0.0V 0.16S LF1:0.00HZ 0.16S

LV3:0.0V 0.16S LF2:0.00HZ 0.16S

Grid Set4

For California only.

5.9 Generator Port Use Setup Menu

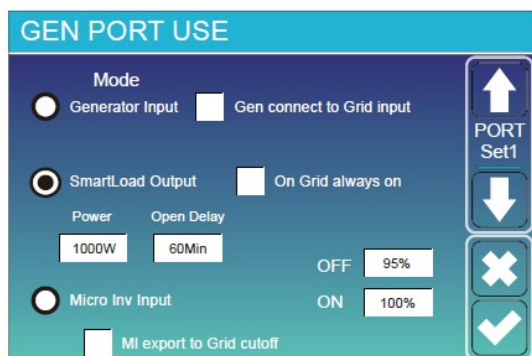

GEN PORT USE

Mode

☐ Generator Input ☐ Gen connect to Grid input

☒ SmartLoad Output ☐ On Grid always on

Power: 1000W Open Delay: 60Min

☐ Micro Inv Input OFF 95% ON 100%

☐ MI export to Grid cutoff

PORT Set1


Genertor Input:use Genertor

SmartLoad Output: if the SOC is up than “ON” and solar power is high than 1000W. the inverter will open smartload.

On Grid always on:mean when have Grid,the smartload will always on

Micro Inv Input:Inverter will open Microinverter.if the SOC if below the “ON” and close if the SOC if up than the “OFF”

5.10 Advanced Function Setup Menu

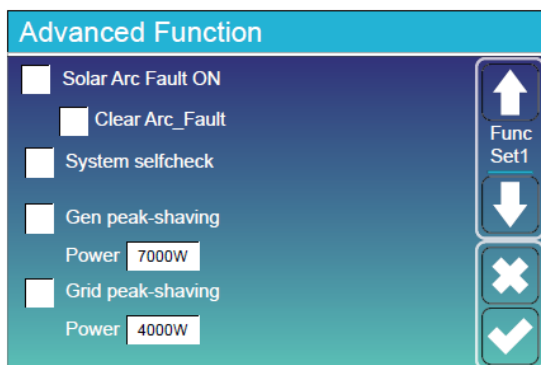

Advanced Function

☐ Solar Arc Fault ON

☐ Clear Arc_Fault

☐ System selfcheck

☐ Gen peak-shaving Power: 7000W

☐ Grid peak-shaving Power: 4000W


Func Set1

Solar Arc Fault ON---This is only for US.

System selfcheck ---Disable. this is only for factory.

Gen Peak-shaving---Enable When the power of the generator exceeds the rated value of it, the inverter will provide the redundant part to ensure that the generator will not overload.

Grid Peak-shaving---Enable When the power of the grid exceeds the set value, the inverter will provide the redundant part to ensure that the grid power does not exceed the set value.

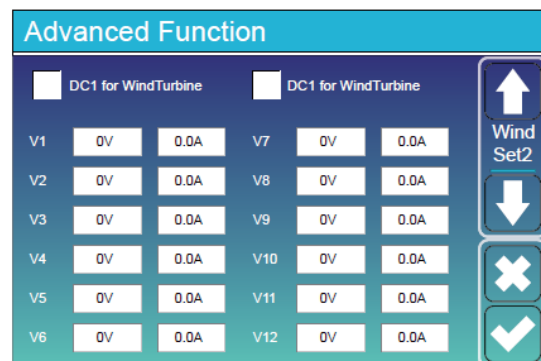


Advanced Function

☐ DC1 for WindTurbine ☐ DC1 for WindTurbine

V1	0V	0.0A	V7	0V	0.0A
V2	0V	0.0A	V8	0V	0.0A
V3	0V	0.0A	V9	0V	0.0A
V4	0V	0.0A	V10	0V	0.0A
V5	0V	0.0A	V11	0V	0.0A
V6	0V	0.0A	V12	0V	0.0A

Wind Set2

This is for WindTurbine

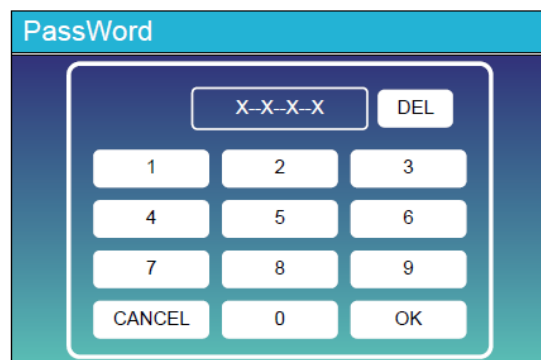

PassWord

X-X-X-X DEL

1	2	3
4	5	6
7	8	9
CANCEL	0	OK

Factory restart: 9999

Lock out all changes:7777

5.11 Device Info Setup Menu

Device Info.		
Inverter ID: 1601012001		
HMI: Ver0302	MAIN: Ver1400	
Alarms Code	Occurred	
F64 Heatsink_HighTemp_Fault	2019-03-11	15:56
F64 Heatsink_HighTemp_Fault	2019-03-08	10:46
F64 Heatsink_HighTemp_Fault	2019-03-08	10:45


This page show Inverter ID, Inverter version and alarm codes.

HMI: LCD version


MAIN: MCU version

6. Mode


Mode 1: Basic

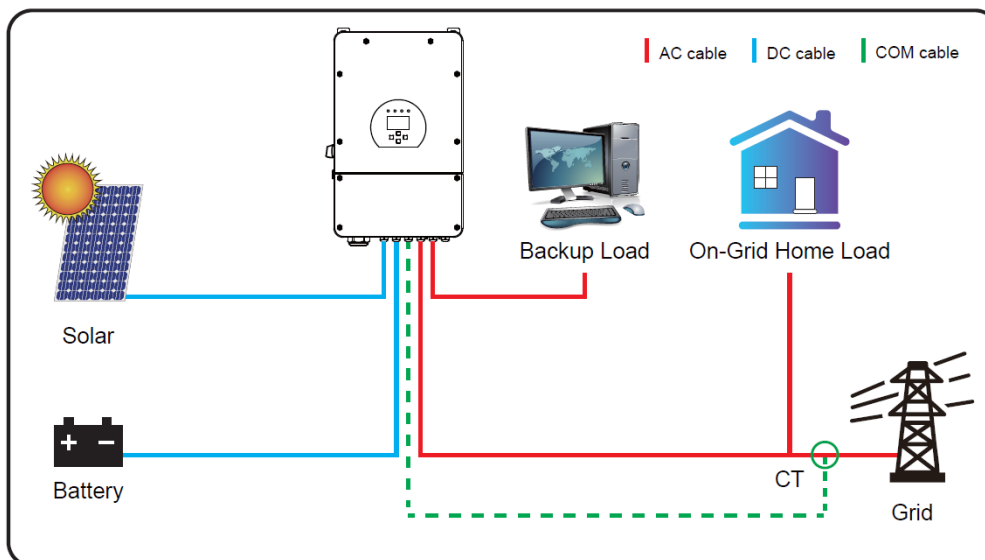


Mode 2: With Wind Turbine

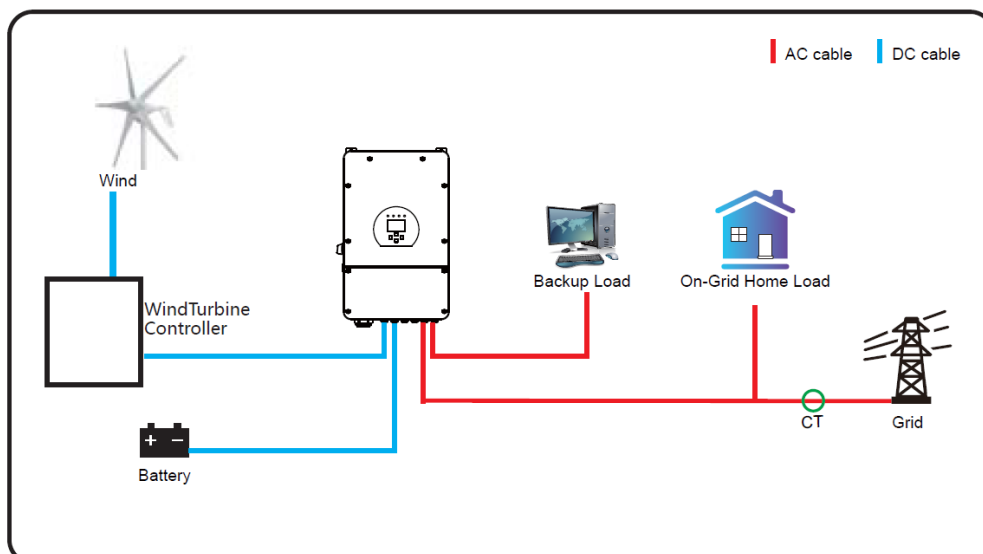


Mode 3: With Generator

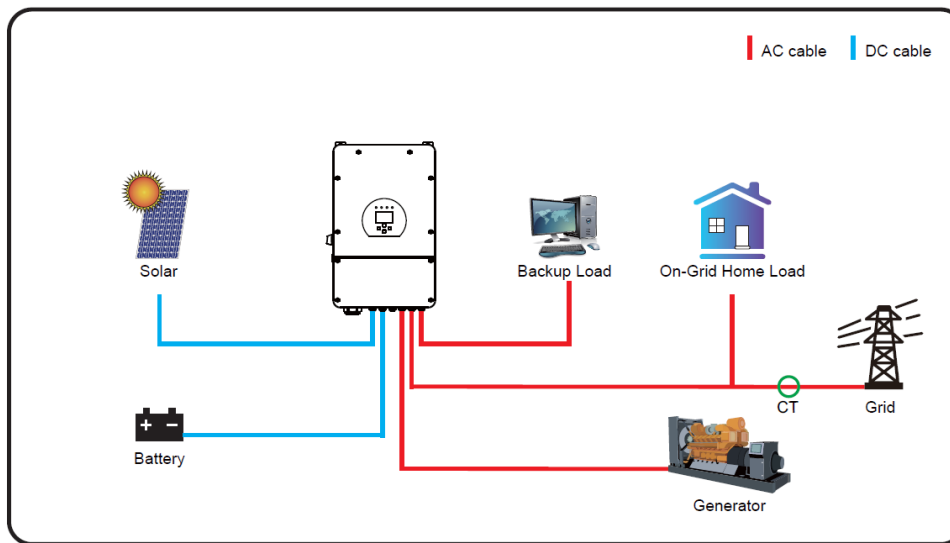

Mode 4: With Smart Load

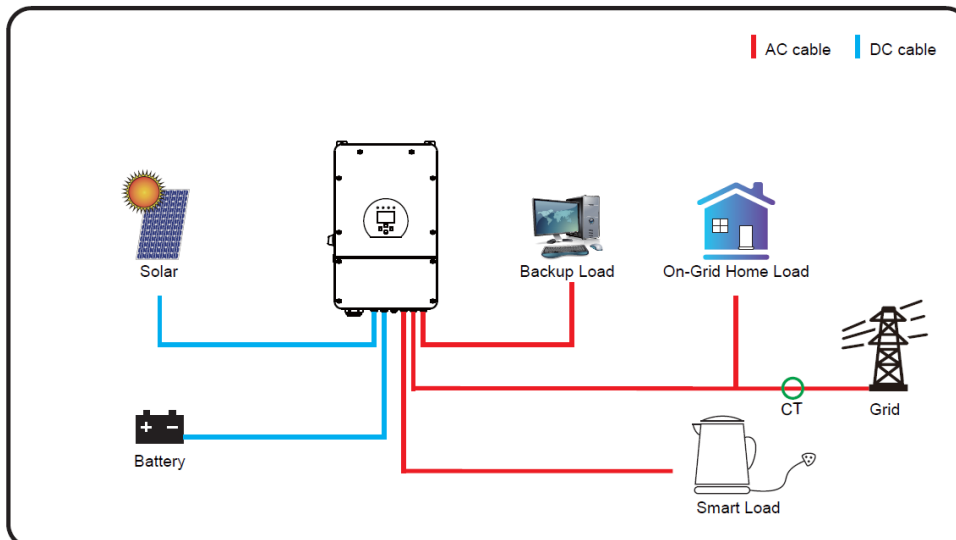

Mode 5: With On-Grid Inverter

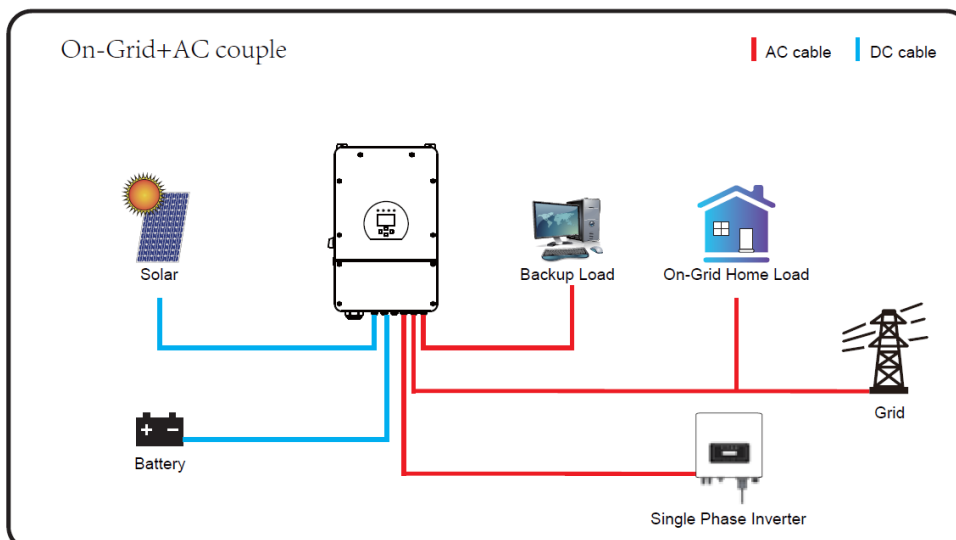



The 1 priority power of the system is always the PV power, then 2nd and 3rd priority power will be the battery bank or grid according to the settings. The last power backup will be the Generator if it is available.

7. Fault information and processing

The energy storage inverter is designed according to the grid-connected operation standard and meets the safety requirements and electromagnetic compatibility requirements. Before leaving the factory, the inverter undergoes several rigorous tests to ensure that the inverter can operate reliably.



If any of the fault messages listed in Table 6-1 appear on your inverter and the fault has not been removed after restarting, please contact your local dealer or service center. You need to have the following information ready.

1. Inverter serial number;
2. Distributor or service center of the inverter;
3. On-grid power generation date;
4. The problem description (including the fault code and indicator status displayed on the LCD) is as detailed as possible.
5. Your contact information. In order to give you a clearer understanding of the inverter's fault information, we will list all possible fault codes and their descriptions when the inverter is not working properly. In order to give you a clearer understanding of the inverter's fault information, we will list all possible fault codes and their descriptions when the inverter is not working properly.

Fault information	Instruction
F01	DC_Inversed_Failure
F02	DC_Insulation_Failure
F03	GFDI_Failure
F04	GFDI_Ground_Failure
F05	EEPROM_Read_Failure
F06	EEPROM_Write_Failure
F07	GFDI_Fuse_Failure
F08	GFDI_Relay_Failure
F09	IGBT_Failure
F10	AuxPowerBoard_Failure
F11	AC_MainContactor_Failure
F12	AC_SlaveContactor_Failure
F13	Working_Mode_change
F14	DC_OverCurr_Failure
F15	AC_OverCurr_Failure
F16	GFCI_Failure
F17	Tz_COM_OC_Fault
F18	Tz_Ac_OverCurr_Fault
F19	Tz_Integ_Fault
F20	Tz_Dc_OverCurr_Fault
F21	Tz_GFDI_OC_Fault
F22	Tz_EmergStop_Fault

F23	Tz_GFCI_OC_Fault
F24	DC_Insulation_Fault
F25	DC_Feedback_Fault
F26	BusUnbalance_Fault
F27	DC_Insulation_ISO_Fault
F28	DCIOver_M1_Fault
F29	AC_AirSwitch_Fault
F30	AC_MainContactor_Fault
F31	AC_SlaveContactor_Fault
F32	DCIOver_M2_Fault
F33	AC_OverCurr_Fault
F34	AC_Overload_Fault
F35	AC_NoUtility_Fault
F36	AC_GridPhaseSeque_Fault
F37	AC_Volt_Unbalance_Fault
F38	AC_Curr_Unbalance_Fault
F39	INT_AC_OverCurr_Fault
F40	INT_DC_OverCurr_Fault
F41	AC_WU_OverVolt_Fault
F42	AC_WU_UnderVolt_Fault
F43	AC_VW_OverVolt_Fault
F44	AC_VW_UnderVolt_Fault
F45	AC_UV_OverVolt_Fault
F46	AC_UV_UnderVolt_Fault
F47	AC_OverFreq_Fault
F48	AC_UnderFreq_Fault
F49	AC_U_GridCurr_DcHigh_Fault
F50	AC_V_GridCurr_DcHigh_Fault
F51	AC_W_GridCurr_DcHigh_Fault
F52	AC_A_InductCurr_DcHigh_Fault
F53	AC_B_InductCurr_DcHigh_Fault
F54	AC_B_InductCurr_DcHigh_Fault
F55	DC_VoltHigh_Fault
F56	DC_VoltLow_Fault
F57	AC_BackFeed_Fault
F58	AC_U_GridCurr_High_Fault
F59	AC_V_GridCurr_High_Fault
F60	AC_W_GridCurr_High_Fault
F61	AC_A_InductCurr_High_Fault
F62	AC_B_InductCurr_High_Fault
F63	ARC_Fault
F64	Heatsink_HighTemp_Fault

Chart 6-1 Fault information

Under the guidance of our company, customers return our products so that our company can provide service of maintenance or replacement of products of the same value. Customers need to pay the necessary freight and other related costs.

Any replacement or repair of the product will cover the remaining warranty period of the product. If any part of the product or product is replaced by the company itself during the warranty period, all rights and interests of the replacement product or component belong to Energy Depot Swiss GmbH

Factory warranty does not include damage due to the following reasons:

- Damage during transportation of equipment ;
- Damage caused by incorrect installation or commissioning ;
- Damage caused by failure to comply with operation instructions, installation instructions

or maintenance instructions ;

- Damage caused by attempts to modify, alter or repair products ;
- Damage caused by incorrect use or operation ;
- Damage caused by insufficient ventilation of equipment ;
- Damage caused by failure to comply with applicable safety standards or regulations ;
- Damage caused by natural disasters or force majeure (e.g. floods, lightning, overvoltage, storms, fires, etc.)

In addition, normal wear or any other failure will not affect the basic operation of the product. Any external scratches, stains or natural mechanical wear does not represent a defect in the product.

8. Limitation of Liability

In addition to the product warranty described above, the state and local laws and regulations provide financial compensation for the product's power connection (including violation of implied terms and warranties). The company hereby declares that the terms and conditions of the product and the policy cannot and can only legally exclude all liability within a limited scope.

Data Sheet:

Technical Data	GOLLUM 5k_US/EU	GOLLUM 6k_US/EU	GOLLUM 7.6 K US/EU	GOLLUM 8 K US/EU
Battery Input Data				
Battery Type	Lead acid or Li-Ion			
Battery Voltage Range (V)	40 – 60			
Max. Charging Current (A)	120	135	190	190
Max. Discharge Current (A)	120	135	190	190
Charging curve	3 Stages / equalization			
External temperature sensor	Optional			
Charging Strategy for Li-Ion Battery	Self adaption to BMS			
PV String Input Data				
Max. DC Input Power (W)	6500	7800	9880	10400
Max. DC Input Voltage (V)	500			
PV Input voltage range (V)	370 (100-500)			
MPPT Range (V)	125 – 425			
Start-up Voltage	125			
Max. Input Current (A)	11+11	18+9	18+18	18+18
No. of MPP Tracker	2			
No. of Strings per MPP-Tracker	1+1	2+1	2+2	2+2
AC Output Data				
Rated AC output and UPS power (W)	5000	6000	7600	8000
Max AC Power Output (W)	5500	6600	8360	8800
Peak Power (off-grid)	2 time of rated power, 10s			
AC Output rated current (A)	20.8	25	31.7/33	33.4/35
Max. AC current (A)	24	28.8	36.4/38	38.3/40
Output frequency and voltage	50/60 Hz, 120 VAC&240 AC (splitphase), 208V AC (2/3 phase), 230 V AC (single phase)			
Max. AC current (A)	Split phase, 2/3 phase, Single phase			
Output frequency and voltage	THD<3%(Linear loading<1.5%)			
Efficiency				
Max. Efficiency	97,6%	97,6%	97,6%	
Euro Efficiency	97,0%	97,0%	97,0%	
MPPT Efficiency	99,9%	99,9%	99,9%	
Protection				
PV Arc Fault detection	Integrated (Except European Type)			
PV input lightning protection	Integrated			
Anti-islanding Protection	Integrated			
PV String Input Reverse Polarity Protection	Integrated			
Insulation Resistor Detection	Integrated			
Residual Current Monitoring Unit	Integrated			
Output Over Current Protection	Integrated			
Output Shorted Protection	Integrated			
Output Over Voltage Protection	Integrated			
Certifications and Standards				
Grid Regulation	UL1741,IEEE1547, RULE21, VDE 0126, AS4777, NRS2017, G28, G99, VDE-ARN 4105			
Safety Regulation	IEC62109-1&2, IEC62040-1			
EMC	EN61000-6-1, EN61000-6-3, FCC 15 class B			
General Data				
Operating Temperature Range (°C)	-25~60°C, >45°C Derating			
Cooling	Fan			

USER MANUAL

Noise (dB)	<30
Communication with BMS	RS 485 / CAN
Weight (kg)	32
Size (Width*Height*Depth mm)	680*420*233mm
Protection Degree	IP65
Installation Style	Wall mounted
Warranty	5 years



Energy Depot Swiss GmbH

Breitenäckerliweg 11
8280 Kreuzlingen
Switzerland

GM: Roland Burkhardt
UID: CHE-109.898.590 HR/MWST
EHRA-ID: 68960
Phone: +41 71 670 1765
Email: info@energydepot.ch
Web: www.energydepot.ch